

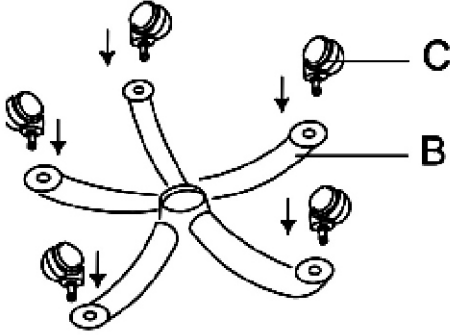
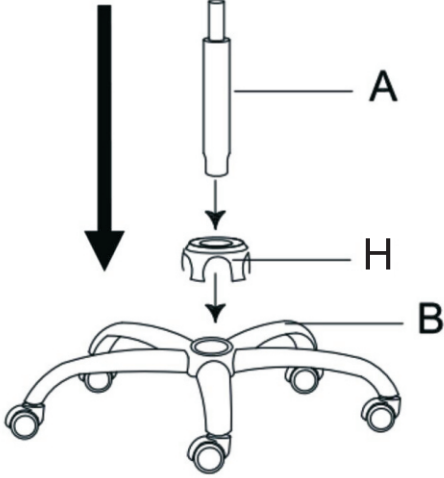

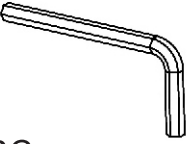


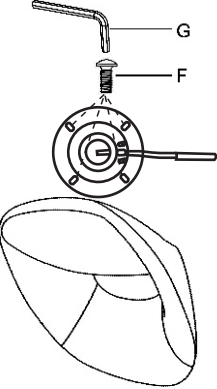
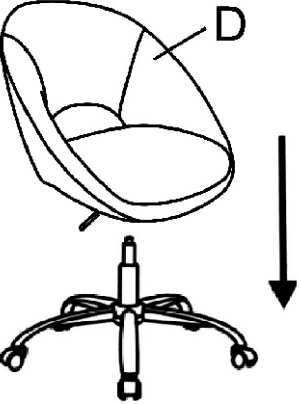

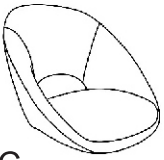

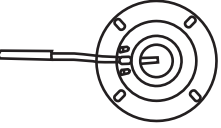


# ASSEMBLY INSTRUCTIONS

## Item No:CHM6075O

<p><b>A</b></p>  <p>1 PC</p>	<p><b>F</b></p>  <p>4 PCS</p>	<p><b>STEP 1</b> Insert caster C to bottom of the spider base B.</p> 	<p><b>STEP 2</b> Attach the metal cover H on top of the base then insert the gas lift to the center hole of the base.</p> 
<p><b>B</b></p>  <p>1 PC</p>	<p><b>G</b></p>  <p>1 PC</p>		
<p><b>C</b></p>  <p>5 PCS</p>	<p><b>H</b></p>  <p>1 PC</p>	<p><b>STEP 3</b> Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first.</p>  <p>Use bolt F and allen key G to attach mechanism E to bottom of the seat,make sure the holes on under seat align with metal plate,then fasten bolts to secure.</p>	<p><b>STEP 4</b> Assembly completed.</p>  <p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.</p> 
<p><b>D</b></p>  <p>1PC</p>	<p><b>I</b> EXTRA PARTS</p>  <p>1PC</p>		
<p><b>E</b></p>  <p>1PC</p>			