Assembly Instructions

Item No:CHDT0103 KD

A*1

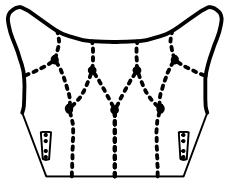

B*1

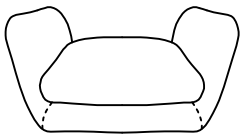

C*2(FRONT)



D*2(BACK)



E*12
M6*16mm



F*1
M6*40mm



G*1
M6



H*1
M5

E*1
M6*16mm



EXTRA PARTS

F*1
M6*40mm



EXTRA PARTS

① Carefully align male and femal bracket then insert backrest A into space between armrest,push all the way down to secure.

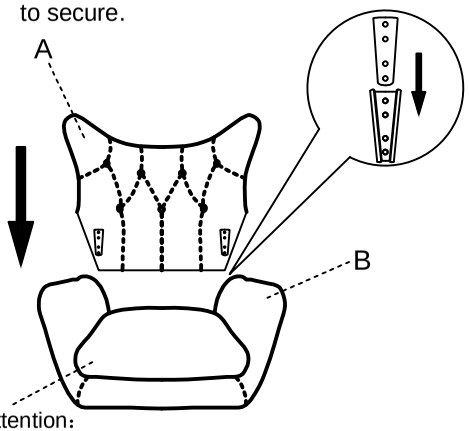

Attention：
Remove the seat cushion before assembly, and return it to the seat cushion after assembly

② Use bolt F, flat washer G,allen key H to connect chair back with cushion. Fasten bolts to secure.

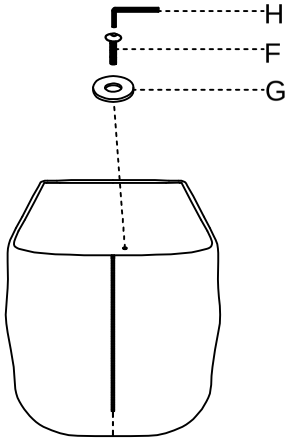

③ Place the Seat B on a clean padded surface.Use bolt E allen key H to attach the leg C and D to bottom of the seat B.

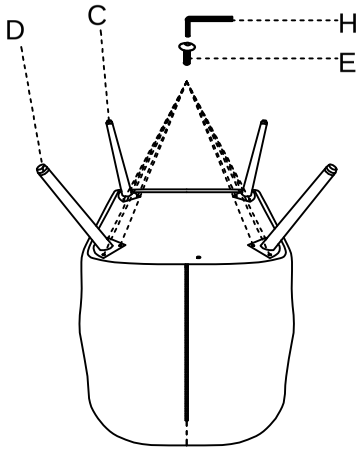

④ Assembly completed.

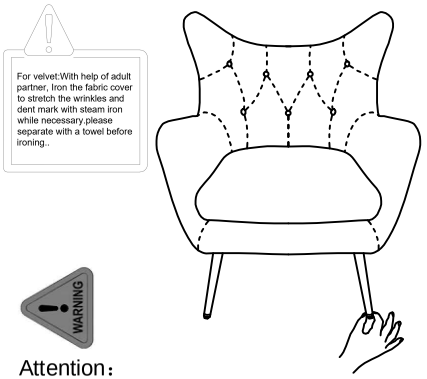

Attention：
After installation, adjust the adjustable leveler to keep the chair balanced.
Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.